

TENMARS

TRIAXIAL ELF Magnetic Field Meter

TM-192 / TM-192D



HB2TM1920005

Table of Contents

1.	Introduction	1
2.	Application	2
3.	Features.....	3
4.	Identifying Parts	4
5.	Measurement Procedures	5
6.	Clock setup	7
7.	Auto power off setup	8
8.	Continuity data logging setup	9
9.	Clear ALL data logger memory	11
10.	Single data memory record	12
11.	Viewing logged reading control key	12
12.	Specifications	13
13.	Battery replacement	14
14.	External DC Power.....	14
15.	Safety Precaution.....	15
16.	Software installation (192D)	16
17.	End of Life Disposal	17

1. Introduction

Safety precautions should be taken against electric appliances in places including medical institutions, schools and residential districts, where people usually stay for a long time, to prevent patients, babies and senior citizens from exposure to high electromagnetic waves.

An electromagnetic wave simply means the wave motion of the electromagnetic field (**EMF**).

The change in electric fields produces magnetic fields, and the change in magnetic fields can also generate electric fields. The fluctuation of correlation between each other is known as "electromagnetic waves", which is a form of energy similar to light and heat that can be transmitted either by radiation in the air or by an electric conductor.

It is suggested that rearrangements should be made in homes and work locations where the strongest electromagnetic fields are detected in order to avoid prolonged exposure to excessive electromagnetic fields.

2. Application

This meter is applied to measuring magnetic fields of extremely low frequency (**ELF**) of 30 to 2000Hz.

It is capable of measuring the magnetic field radiation intensity that is produced from electric transmission equipment, power lines, microwave ovens, air conditioners, refrigerators, computer monitors, video/audio devices and so forth.

The magnetic field unit is Tesla (T), Gauss (G), milli-Gauss (mG) or micro-Tesla (μ T).

$$1 \text{ T} = 10,000 \text{ G}$$

$$1 \text{ G} = 1,000 \text{ mG}$$

$$1 \mu \text{ T} = 10 \text{ mG}$$

3. Features

Uses three internal orthogonal sensors to test a wide range of ELF magnetic fields, independent of measurement angle.

The tester is designed to provide a quick, reliable and easy way to measure magnetic field radiation levels around power lines, home appliances and industrial devices.

The tester is a cost-effective hand-held instrument that was designed and calibrated to measure magnetic field radiation at different bandwidths from 30Hz to 2000Hz.

Display microTesla(μT) or milliGauss(mG) units. Data hold (HOLD), maximum Hold (MAX), and minimum Hold(MIN) function.

Auto range or manual range select mode.

Datalogging capacity with Memory Size : 500 data sets (Model 192) or 9999 data sets(Model 192D).

USB PC interface (192D).

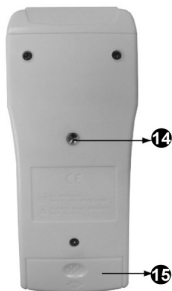

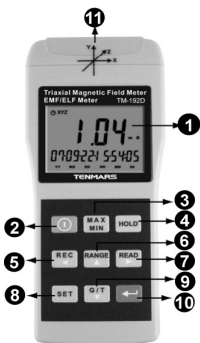
Time and calendar function.

Low battery indication “”.

Over load display “OL”.



Auto power OFF function .


4. Identifying Parts



1. LCD display.
2. Power key.
3. maximum Hold and minimum Hold key.
4. Data Hold key.
5. Record data and Setup function **left** key.
6. Range and Setup function **up** key.
7. Reading and Setup function **right** key.
8. Setup function key.
9. Units and Setup function **down** key.
10. Enter key.
11. Calibration point for Triple axis.
12. External power DC 9V.
13. USB interface (TM-192D).
14. Tripod mounting screw.
15. Battery cover.



5. Measurement Procedures


Press “” key turn on the meter, press “” key again to turn OFF the meter.



Press “” key to select milli-gauss (mG) or micro-tesla (μT) unit.

Position the front of the meter to measure the magnetic waves.



Read the measured value. When manual range mode is

selected, LCD will shown the  mark, The display of “OL” on the highest position indicates there is an overload on the reading. Press “” to select a higher range for measurement again.

The default value display is triaxial total magnetic field reading. Press “” key to toggle between independent three single-axis magnetic field readings and triaxial total magnetic field reading.

To lock and keep the reading displayed on the LCD, press “” or press “” again to

unlock.

To retain the maximum and minimum value, press “” key and the reading value displayed on the LCD will keep updating to the maximum value. Press again to select minimum value, press and hold down “” key 2 seconds to exit the maximum and minimum mode.

Due to the magnetic interference of the environment field factors, this magnetic field meter could display a reading value that is greater than 0.5 mG prior to measuring. This is not a malfunction of the tester.

With the tester in hand, move slowly towards to the object under measurement until it is physically touched.


Notice how the field intensity increases as you move closer to the object.

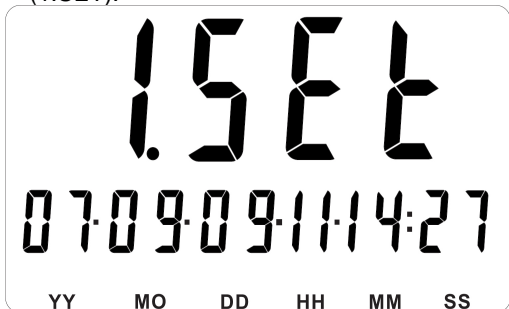
If the power of object was turned off during the measurement, the reading of tester should return to zero, unless an electromagnetic field from

other sources is detected.

6. Clock setup


This meter clock uses 24 hour time.

Press “” key to enter clock setting mode (1.SET).




Press “” or “” key to select option to adjust.


Press “” or “” key to change the digit.


Press “” key to store the setup, exit the mode.

7. Auto power off setup

Press “” key again to auto power off time setting mode (2.SET).




Press “” or “” key to change the auto power off time.

Press “” key to store the setup, exit the mode.

The auto power off time default value is 5 minutes. Range is 0 to 99 minutes. To cancel auto power off, please set time to 0 minutes.

8. Continuity data logging setup


The data logging interval is the time between data records. To begin data logging, set the logging interval as per instructions below. To exit data logging, set logging interval back to 0.

Press “” key again to enter continuous data logging interval setting mode (3.SET).




Press “” or “” key to select option to adjust.

Press “” or “” key to change the value.


Press “” key to store the setup, exit the mode.

Interval time range can be set by user, from 2 seconds to 24 hours, 59 minutes and 59 seconds.


Clear data logger memory (last data entry)

Press “” key again to clear data logger memory for last record setting mode (4.CLA)




Press “” key to clear data logger memory for last record and exit the mode.


9. Clear ALL data logger memory

Press “” key again to clear data logger memory for all record setting mode. (5.CLA)




The image shows a digital LCD display with a white background and black characters. The top row displays "5.01A" in a large, segmented font. Below the "A" in the top row, the word "ALL" is displayed in a smaller, segmented font.


Press “” key to clear data logger memory for all record.




Press “” key to store the setup, exit the mode.

10. Single data memory record

Press “” key each time to store the display reading and time stamp in memory.

11. Viewing logged reading control key

Press “” key to view logged readings.

Press  or  key to scroll through the readings, Press “” key to exit this mode.

12. Specifications

Display : 4 digits Triple LCD display.

Range : 20/200/2000 mG, 2/20/200 μ T.

Resolution : 0.01/0.1/1 mG or 0.001/0.01/0.1 μ T.

Frequency response : 30Hz to 2000Hz.

Sensor : Triple Axis (X, Y, Z).

Accuracy : 20mG/2 μ T \pm (3.0%+30dgt) at 50Hz/60Hz. 200mG/20 μ T and 2000mG/200 μ T \pm (2.5%+5dgt) at 50Hz/60Hz. or \pm (5%+5dgt) at (30Hz~2000Hz)

Over load : LCD display "OL".

Sample rate : 2.5 times per second.

Battery : 9V NEDA 1604, IEC 6F22 or JIS 006P.

Battery life : Approximate 100 hours.

Operating temperature & humidity :

5 $^{\circ}$ C to 40 $^{\circ}$ C, below 80% RH.

Storage temperature & humidity :



-10 $^{\circ}$ C to 60 $^{\circ}$ C, below 70%.

Weight : About 230g.

Dimensions : 173(L) X80(W) X32(H) mm.

Accessories : User's manual, 9V battery, Carrying case.(MINI USB 4P(MALE) to USB A Type cable).

13. Battery replacement

	WARNING
	If the symbol “  ” appears on the LCD, please replace the battery immediately

Turn off the instrument.

Open the battery cover and remove the battery.

Replace with four-9V NEDA 1604, IEC 6F22 or JIS 006P size battery.

Install the battery cover.

14. External DC Power

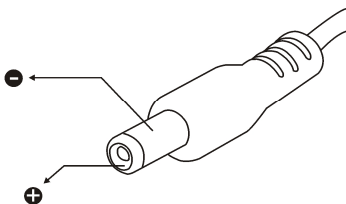
External AC to DC adapter :

Voltage 9VDC (8~14VDCMax).

Supply current : > 300Madc.

Socket : pin Positive, Ground Casing External.

Diameter 6.3mm ; internal Diameter 2.0 mm.



15. Safety Precaution

For cleaning the instrument use a soft dry cloth.

Never use a wet cloth, solvents or water, etc.

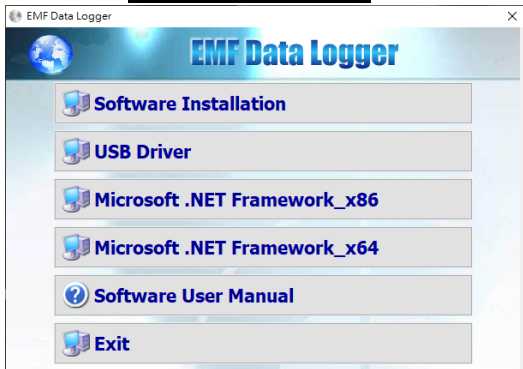
Operation Altitude : Up to 2000M.

Operating Environment : Indoors use.



This instrument has been designed for being used in an environment of pollution degree 2.

16. Software Installation (192D)

1. Link website <https://www.tenmars.com/>
2. Click **English** in the upper right corner of the web page.
3. Search TM-192D.
4. Click on the TM-192D photo.
5. Click File Download, then select **Software Download**.
6. Download and unzip the software.
7. For the latest software information and installation procedures, Please download the **software instructions**.



17. End of Life Disposal

 	<p style="text-align: center;">Caution</p> <p>This symbol indicates that equipment and its accessories shall be subject to a separate collection and correct disposal</p>
--	--

TENMARS ELECTRONICS CO., LTD
6F, 586, RUI GUANG ROAD, NEIHU,
TAIPEI 114, TAIWAN.

E-mail : service@tenmars.com

<http://www.tenmars.com>